

quick guide




Always do a Pipehorn System Check before use.
(see Manual)

Pipehorn
PIPE AND CABLE LOCATORS


Model 100/500

1 No Hook-Up


To induce the strongest signal, place the high-frequency transmitter directly over and in line with the target conductor (not on a metal cover).

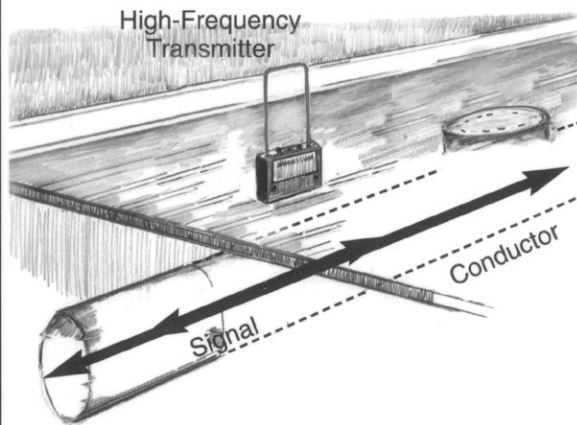

2 Direct Connect

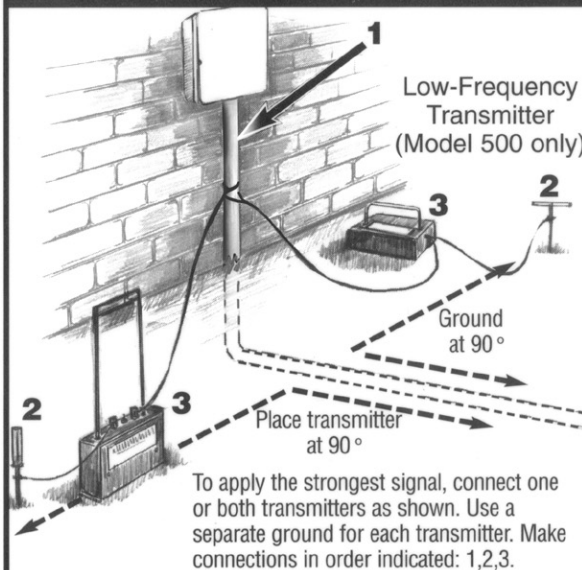


3 About the Receiver

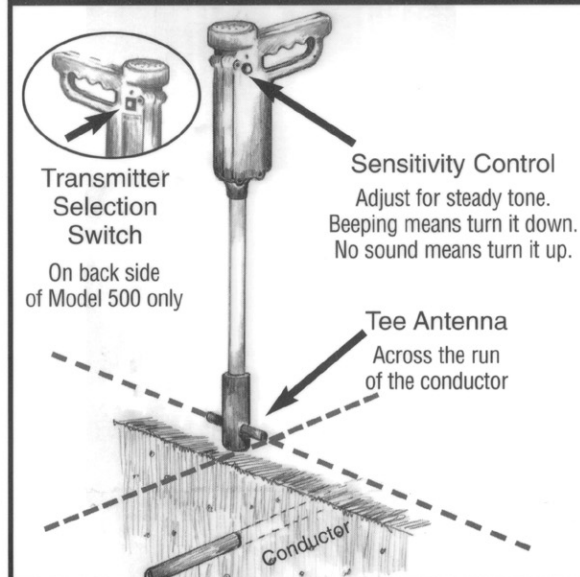


4 Pinpointing

1. Set the Sensitivity Control for a steady tone.

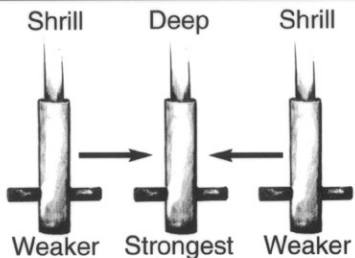


2. Scan in the direction of deeper tone (moving toward the target). If the receiver begins to beep, stop, adjust the sensitivity for a shrill tone and continue in the same direction.

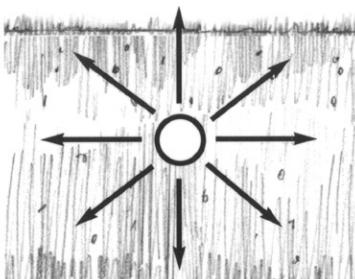

3. Pinpoint the target by finding the deepest tone (shrill sound on both left and right). This is the strongest signal directly over the conductor.

5 Check for Air Coupling

After pinpointing with a deep tone, raise the tee antenna, point it at the transmitter, and listen for the change in tone.

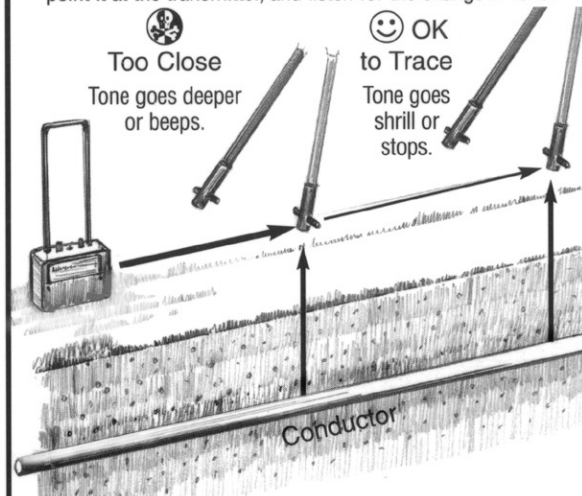

6 Reminders

• This Quick Guide is not intended to replace the User's Manual. It contains basic Pipehorn operating procedures and equipment description. Read the User's Manual thoroughly to get the most from your Pipehorn.

• **Repairs:** Your new Pipehorn has a 3-year warranty against defects. Simply return your Pipehorn to the address shown on the unit. Generally, repairs are completed within two days after receipt.

• **Pipehorn's dependability, accuracy and ease of use** have been the basis of its popularity. Thousands of satisfied users have recommended Pipehorn for 30 years. We want you, like many others, to recommend Pipehorn without reservation.

Contact us on our
User's Hot Line
1-800-952-3710
or at our e-mail address:
info@pipehorn.com.